

Steps to upgrade the software in your Olive Fluid


Version: Olive Fluid "Maestro"

Important Instructions:


- a. Please take a back up for your important phone data e.g CONTACTS ,SMS
- b. Do not switch off the phone during upgrading process
- c. The phone battery should be at least 70% charged
- d. Please DO NOT remove battery during installation

Download the software from the Olive Website in your Laptop / Desktop. The size of the software will be about 73 MB


1. Insert your T-Flash / SD card on your Olive Android phone.
2. Attach your phone to the computer with your data cable and Copy "Update.zip" and"Update_swbl.zip" into your T-flash card.
3. Remove the data cable and switch off your phone. Please ensure the 2 zip files (Update.zip" and"Update_swbl.zip")are copied to your SD card

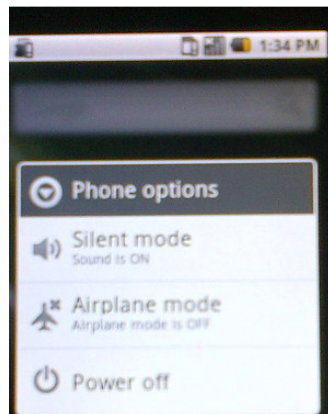

4. Press "volume up" and "Home" keys together, hold them and now press "power on" key. You will see Olive Power on animation on the main screen .Keep pressing for 5 more seconds and then release the "volume up" and "home" keys.

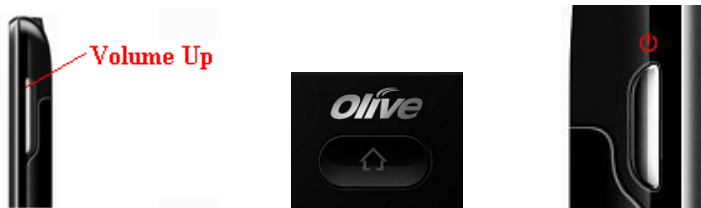

5. It should get into an interface of "Recovery mode". If your phone powers on normally instead of "Recovery Mode", please power off the phone and repeat step 3 till you see "Recovery Mode".

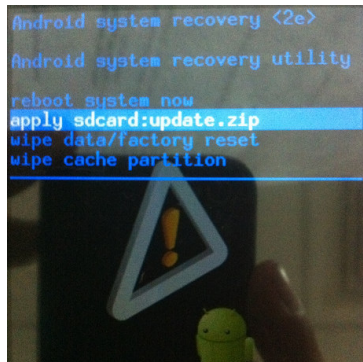


5. Under "Recovery Mode", choose the second menu option to start T-flash card upgrade ("**volume up/down**"


keys for choosing, "home" key  for ok).

6. If you get a message "Installation Aborted " then please check if your T-Flash card is inserted properly . Repeat procedure mentioned in step 3

7. The upgrade will start on your Olive Fluid. **PLEASE DO NOT REMOVE BATTERY ANYTIME DURING UPGRADING**

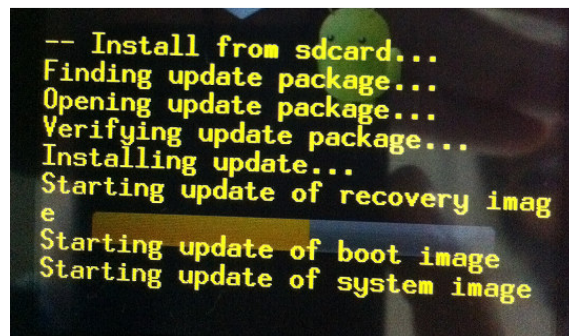


8. After few minutes you will get a message "Installation Complete".

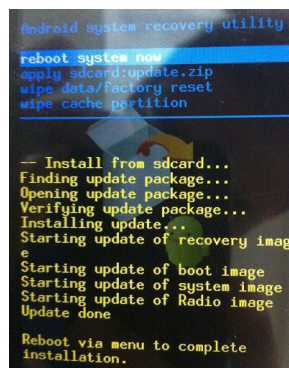

9. You will now be required to reboot your phone. The reboot option will be automatically highlighted. **Press**

HOME key  **for ok.**

10. Once again the phone will ask you to reboot ("**volume up/down**" keys for choosing, "**home**" key  **for ok**). The phone will automatically power on.



Your Olive Android phone is upgraded and ready to be used!!